

pro's pro®

HORNET STRINGING MACHINE



MANUAL

Installation & Operation

Table of Contents

1	TABLE OF CONTENTS.....	2
2	DESCRIPTION OF PARTS.....	3
3	ASSEMBLY INSTRUCTION.....	4
4	STRINGING THE FRAME.....	6
5	CLAMP BASE ADJUSTMENT.....	8
6	PREPARATION OF STRINGING.....	9

PRO'S PRO®—HORNET

I DESCRIPTION OF PARTS

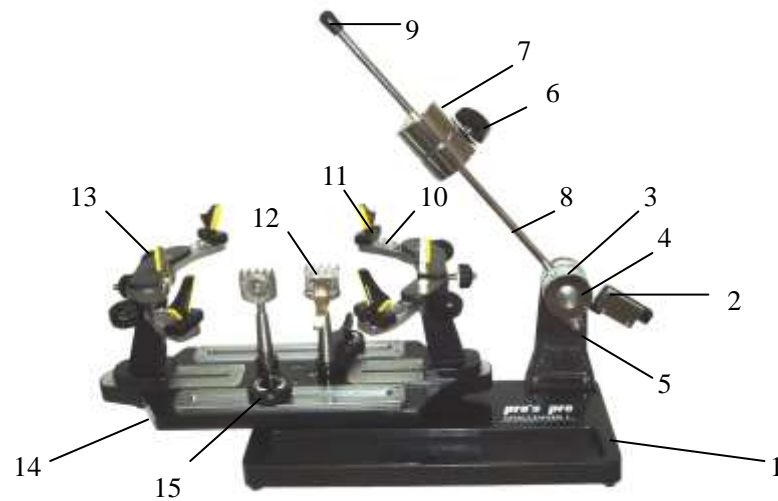


Illustration picture

- | | |
|-------------------------------|--------------------|
| 1) Machine Base | |
| 2) Liner String Gripper | |
| 3) Tension Bar Drum | |
| 4) Ratchet System with clutch | |
| 5) Latch | |
| 6) Drop Weight Knob | 14) Mounting Table |
| 7) Drop Weight | 15) Swivel Base |
| 8) Tension Bar | |
| 9) Tension Bar End Cap | |
| 10) Side support arm | |
| 11) Angled Support | |
| 12) String Clamp | |
| 13) Frame Support | |

1. ASSEMBLY INSTRUCTION

Step 1: Open the box. Take out the angled support (8), The string clamp (9), Remove the foam box, Remove the machine from the foam box.

Step 2: Rotate the mounting table and lift the tension bar.



Step 3: Take the drop weight knob and insert into the hole of drop weight.

In case of stringing badminton rackets you have to separate the weight and use just the one with the drop weight knob inside.



Step 4: Do not position the drop weight knob on the side of the tension bar sticker. Fix it on the opposite side.

Step 5: Take the 5m/m l-shaped wrench to adjust the screw for appropriate position.




2. STRINGING THE FRAME



Step 1: Insert the angle frame supports into the appropriate slots located on the end of the mounting arms. The two slots are designed to accommodate most racquets. For stringing badminton rackets, you have to turn all 4 frame supports 180°.



Step 2: Make adjustments by turning the fine adjustment knobs. The fit should be snug. Turn the mounting arm adjustment knobs so that the angled frame supports fit up against the frame. The fit should be snug, but use caution. NOTE: Over-tightening can cause premature stress on the frame.

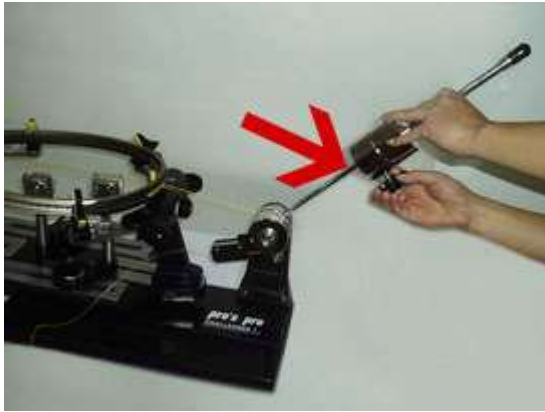

Step 3: Correct the location of the knob and drop weight. The required stringing weight is indicated on the scale below the weight on the machine side.



Step 5: After the tension bar is in horizontal position the string is pulled with the right tension. Secure the string with the clamp. Then push the latch downward and move the tension bar upward to be able to release the string from the string gripper. Attention: if you do not push down the latch it is impossible to release the string.

3. CLAMP BASE ADJUSTMENT



Locate the black cap on the backside of the black base. Carefully pull it off.



Turn the swivel base so that the outer port is aligned with the inner port. Take the 3m/m I-shaped wrench and insert into the internal adjustment screw. Turn clockwise to increase tension. The ideal locking position for the lever should be down the center of the swivel base

4. PREPARATION OF STRINGING



To clamp the string, squeeze the toggle to close.

To release the string, pull the toggle to open



To tighten, turn the dial clockwise. To loosen, turn the dial counter-clockwise. NOTE: Before stringing a racquet, the tension on the string clamp has to be adjusted in accordance with the type of string gauge being used. If the string is of a thin gauge (16L 17 18) then the string clamp may need to be tightened. If the string gauge is thick (15 15L 16) then the string clamp may need to be loosened.

Clamps:

Please note that the black O-ring is an essential part of the clamps. Please do not remove this under any circumstances!

Clamp base:

You must first lift the clamp and fix the string. Then the lever of the base clamp can be closed to fix the base on the bar. To unlock the base, simply open and drop the clamps.